



Dialogic® D/600JCT-1E1-75-EW Media Board Installation Guide

Copyright © 2006-2007 Dialogic Corporation.
All rights reserved.

1. Product Description

The Dialogic® D/600JCT-1E1-75-EW media board provides up to 30 channels of voice and media resources and a single, 75-ohm E1 telephony interface in a single, full-length PCI Express slot.

Additional Information

Additional information about the Dialogic® D/600JCT-1E1-75-EW media board is available from a number of sources.

The product data sheet, available at <http://www.dialogic.com/products/list.asp>, provides a functional description as well as information about applications and configurations, features, and technical specifications.

Refer to the Release Guide and the online Release Update for your Dialogic® System Software release to verify that the D/600JCT-1E1-75-EW is supported in the release, and for information on any new features or issues that may relate to it.


The Regulatory Notices document that is packed with each D/600JCT-1E1-75-EW board contains safety warnings and national requirements for proper operation of telecommunications equipment.

2. Before You Begin

Protecting the Board from Damage

CAUTION: All computer boards are sensitive to electrostatic discharge ("ESD"). Handle all static-sensitive boards and components at a static-safe work area, and observe anti-static precautions at all times.

If you are not familiar with ESD safety precautions, visit <http://dialogic.com/support/hwinstall> to learn more.

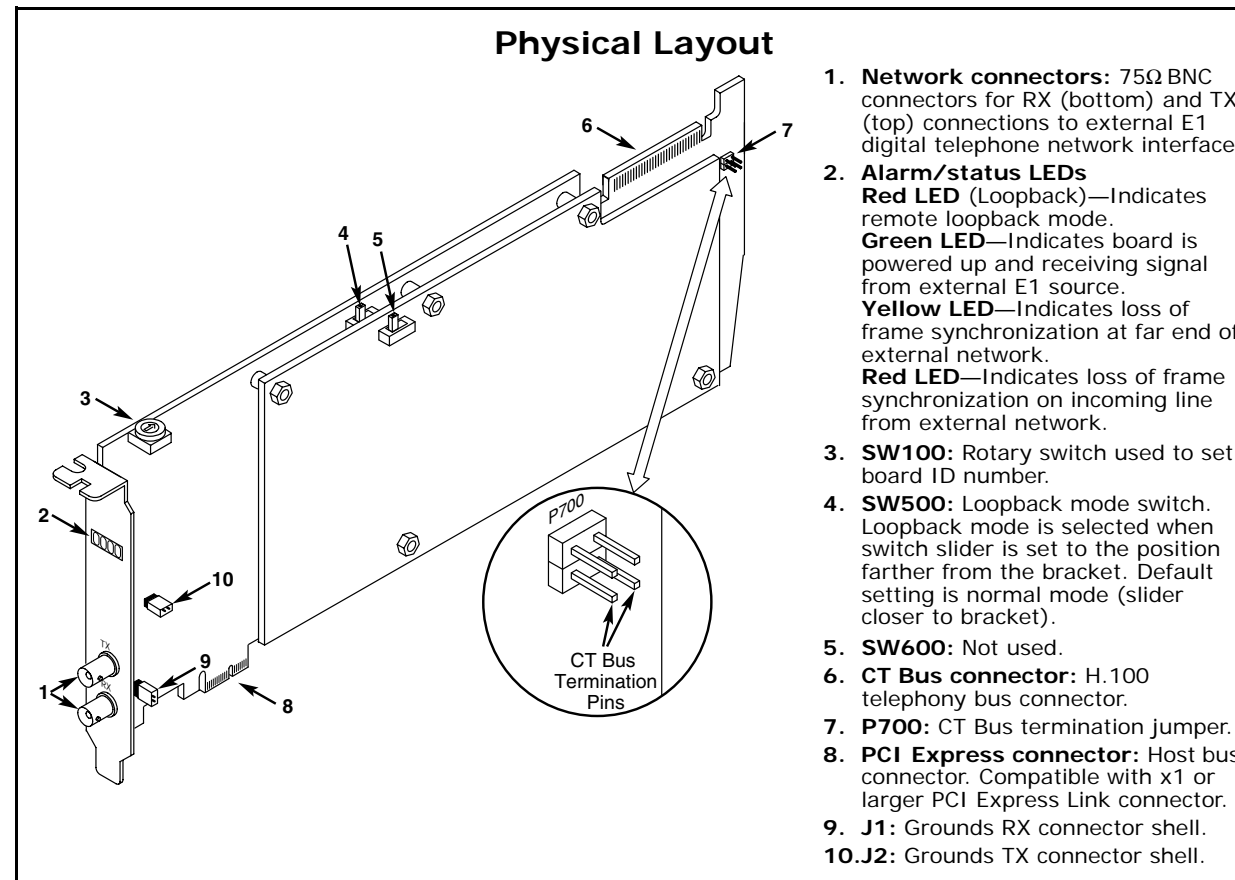

Unpacking the Board

Unpack the board according to the following steps:

1. Prepare a static-safeguarded work area.
2. Carefully remove the board from the shipping carton and static-shielding bag. Handle the board by the edges and avoid touching the board's components.
3. Lay the board on the static-dissipative work surface.

Note: Place boards in static-shielding bags when carrying boards from station to station.

CAUTION: Do not remove the board from the anti-static packaging until you are ready to install it. Observe proper anti-static precautions at all times.

3. Configuring the Board

The D/600JCT-1E1-75-EW board uses Plug and Play technology to simplify installation. No user configuration is required for IRQ or memory address.

The D/600JCT-1E1-75-EW board has four manually configurable options:

- Board ID
- BNC connector grounding
- CT Bus termination
- Remote loopback mode

Setting the Board ID

When the system is started, each Dialogic® telecom board is assigned a board instance ID number that programs can use to identify individual boards in a multi-board system. The setting of SW100 controls the generation of the instance numbers.

1. **Network connectors:** 75Ω BNC connectors for RX (bottom) and TX (top) connections to external E1 digital telephone network interface.
2. **Alarm/status LEDs**
Red LED (Loopback)—Indicates remote loopback mode.
Green LED—Indicates board is powered up and receiving signal from external E1 source.
Yellow LED—Indicates loss of frame synchronization at far end of external network.
Red LED—Indicates loss of frame synchronization on incoming line from external network.
3. **SW100:** Rotary switch used to set board ID number.
4. **SW500:** Loopback mode switch. Loopback mode is selected when switch slider is set to the position farther from the bracket. Default setting is normal mode (slider closer to bracket).
5. **SW600:** Not used.
6. **CT Bus connector:** H.100 telephony bus connector.
7. **P700:** CT Bus termination jumper.
8. **PCI Express connector:** Host bus connector. Compatible with x1 or larger PCI Express Link connector.
9. **J1:** Grounds RX connector shell.
10. **J2:** Grounds TX connector shell.

Windows Systems: In a Windows system, leaving SW100 set to the 0 position (the factory default setting) on all Dialogic® telecom boards causes the system software to assign instance numbers geographically, based on the bus and slot numbers. Note that when using this method, there is no way to know what the instance numbers will be until the system is started and configured, and the instance number for any given board is likely to change when there is any change in the number or arrangement of boards in the system.

As an alternative, you may set SW100 on each board to a different position (0-9 or A-F) to explicitly assign specific ID numbers to the boards. Note that each board must be set to a different ID number.

In either case, you can read the ID numbers assigned to the boards in the Dialogic® Configuration Manager (DCM) after you start the system and invoke that tool.

Linux Systems: In a Linux system, you must explicitly specify the board ID numbers by setting SW100 on each board to a different position (0-9 or A-F). Refer to the Dialogic® Configuration Guide for Springware architecture products in your Dialogic® System Software documentation for further information about the board ID numbers.

Setting the BNC Connector Grounding

The D/600JCT-1E1-75-EW board is shipped with jumpers installed to ground the shell of each BNC connector on the bracket. If it is necessary to remove the ground connection for any BNC connector, simply remove the link from the appropriate jumper as indicated in the Physical Layout section.

Setting the CT Bus Termination

In some systems that connect multiple boards with a CT Bus cable, it is desirable to terminate the bus signal on the boards that are connected at each end of the cable, but this is generally not necessary. If your system requires termination and this board will be the end-most board on the CT Bus cable, install a jumper link (not supplied) over the bottom pair of pins of P700 as indicated in the Physical Description section. Use any standard 2mm pitch jumper link, such as Methode item number 8610-202-70.

Setting the Remote Loopback Mode

The D/600JCT-1E1-75-EW board is shipped with SW500 set for normal operation, with the switch slider in the position closer to the board's bracket. Setting this switch to the opposite position selects the loopback mode and overrides any board modes set by your application. Loopback mode is commonly used to check the network connection

after the firmware has been downloaded to the board.

4. Choosing a Slot

The D/600JCT-1E1-75-EW board implements a PCI Express x1 lane configuration, allowing it to be used in any full-length PCI Express slot. Up-plugging the board into a slot with a x4 or larger link connector will help ensure adequate power budgeting for the board.

If the D/600JCT-1E1-75-EW is the only Dialogic® telecom board in the system, you may choose any slot for the installation.

If the D/600JCT-1E1-75-EW will be connected to other telephony boards via a CT Bus cable, you should install the boards to minimize unused connectors on the CT Bus cable:

- Install boards in adjacent slots whenever possible.
- If the D/600JCT-1E1-75-EW board will be connected to one or more PCI boards, use the PCI Express slot(s) closest to the PCI slots.


5. Installing the Board

WARNING! Unplug the equipment before performing the procedures described here. Failure to disconnect the power before you open the chassis can result in personal injury. Ensure that the system is disconnected from its power source and from all telecommunications links, networks, or modem lines whenever the chassis cover is removed. Do not operate the system with the cover removed.


CAUTION: To avoid possible damage to the board, remove power from the computer before beginning installation. Observe proper anti-static precautions at all times while handling and installing the board.

To install the D/600JCT-1E1-75-EW board, perform the following steps:

1. Turn off all power to the system and disconnect the system's power cords.
2. Remove the computer's cover.
3. Choose an empty PCI Express expansion slot and remove the slot's retaining screw and access cover plate.
4. Insert the board's edge connector into the bus slot, and apply firm pressure to the top edge of the board until the board is fully seated in the edge connector.

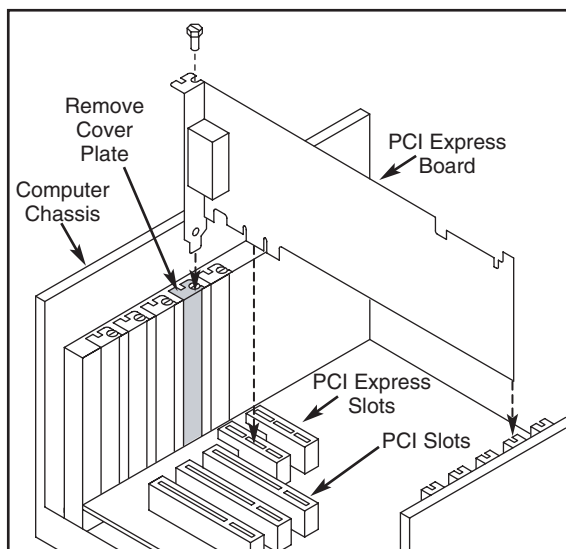

5. Reinstall the retaining screw.
6. Repeat steps 1 through 5 for any additional boards you are installing.
7. Connect the telephony boards together with a CT Bus cable of the appropriate size (not included). If possible, use a cable assembly that matches the number of boards in your system. If the cable has more than one unused connector, install the cable so that all the unused connectors are at one end of the cable.

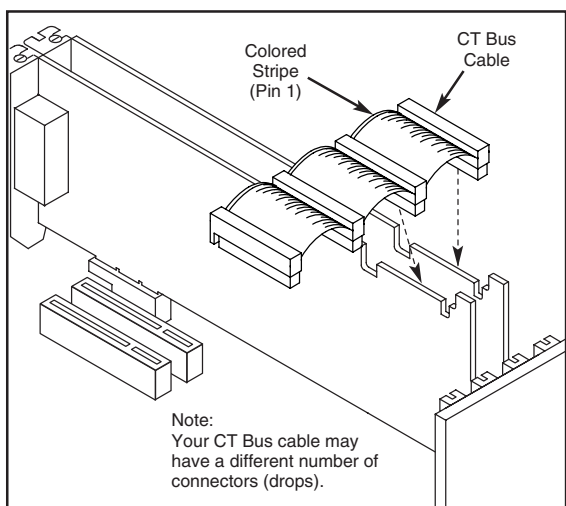

8. Replace the computer's cover.
9. Reconnect the computer's power cord.

6. Connecting to External Equipment

The BNC connectors on the rear bracket of the D/600JCT-1E1-75-EW board support a single 75-ohm E1 digital network interface. Use appropriate 75-ohm coaxial cables to connect the BNC jacks on the bracket to your CSU or other network termination equipment. As indicated in the Physical Layout section, the lower connector is for the receive (RX) connection and the upper connector is for the transmit (TX) connection.

7. After Installing the Board

Note: The start-up current drawn by the D/600JCT-1E1-75-EW board may exceed the value allowed by some implementations of the PCI Express Power Budgeting Capability, particularly if the board is installed in a slot with a x1 link connector. If the board does not start up properly when you power up your system, please contact your vendor or Dialogic Customer Support for assistance.

If you are installing the D/600JCT-1E1-75-EW in a system that already has the Dialogic® System Software installed, you may not need to install a new or upgraded software release to support the board. The D/600JCT-1E1-75-EW has been designed to be compatible with existing System Release 6.x software versions that support PCI boards. Please refer to the Release Update document for your release version (on the Dialogic Telecom Support Resources web page) for up-to-date information about support for PCI Express boards and any known issues relating to their use.

If this is the first Dialogic® telecom board you have installed in your system, you will need to install an appropriate version of the Dialogic® System Software and configure the software for the specific board(s) you are using. Refer to the installation and configuration documentation that accompanies the release for instructions.

When configuring your system for the D/600JCT-1E1-75-EW board, use the same menu selections and configuration settings that are documented for the PCI version of the D/600JCT-2E1.

8. Removing the Board

Removal of the D/600JCT-1E1-75-EW board is essentially the reverse of the installation procedure:

1. Observe anti-static precautions.
2. Disconnect the telephony cables.
3. Remove the computer's power cord.
4. Remove the computer's cover.
5. Disconnect the CT Bus cable (if applicable).

6. Remove and set aside the board's retaining screw.
7. Remove the board and place it static-protective packaging.

9. Warranty and Return Information

Warranty Period

For specific warranty information for this board, refer to the Warranty section of the Products page, located at this URL:

<http://www.dialogic.com/warranties/>.

Contacting Technical Support

Dialogic provides technical support for its products through a network of value added distributors who are trained to answer technical questions on installing and configuring Dialogic® products. If you are unsure how to contact your support channel, please call Dialogic in the United States at 973-967-6600 (9am-5pm EST) and we will assist in obtaining the appropriate support channel.

Outside the United States please refer to <http://www.dialogic.com/support/contact> to obtain local contact information. Dialogic also provides direct support via Dialogic® Pro™ Services agreements. For more details of direct support from Dialogic please refer

to: <http://www.dialogic.com/support/DialogicPro>

Returning a Product

To return a board for warranty repair or any other returns, please refer to the following: <http://www.dialogic.com/support/hwfaults>.

10. Sales Assistance

If you have a sales question, please contact your local Sales Representative or the Regional Sales Office for your area. Address, telephone and fax numbers, are available at the Dialogic website located at: <http://www.dialogic.com/contact.htm>.

To purchase Dialogic® products, please refer to the following website to locate the appropriate supplier: <http://www.dialogic.com/purchase.htm>.

All contents of this document are furnished for informational use only and are subject to change without notice and do not represent a commitment on the part of Dialogic Corporation or its subsidiaries ("Dialogic"). Reasonable effort is made to ensure the accuracy of the information contained in the document. However, Dialogic does not warrant the accuracy of this information and cannot accept responsibility for errors, inaccuracies or omissions that may be contained in this document.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH DIALOGIC® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN A SIGNED AGREEMENT BETWEEN YOU AND DIALOGIC, DIALOGIC ASSUMES NO LIABILITY WHATSOEVER, AND DIALOGIC DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF DIALOGIC PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF A THIRD PARTY.

Dialogic products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

It is possible that the use or implementation of any one of the concepts, applications, or ideas described in this document, in marketing collateral produced by or on web pages maintained by Dialogic may infringe one or more patents or other intellectual property rights owned by third parties. Dialogic does not provide any intellectual property licenses with the sale of Dialogic products other than a license to use such product in accordance with intellectual property owned or validly licensed by Dialogic and no such licenses are provided except pursuant to a signed agreement with Dialogic. More detailed information about such intellectual property is available from Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. **Dialogic encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.**

Dialogic, Diva, Eicon, Eicon Networks, Eiconcard, Dialogic Pro and SIPcontrol, among others, are either registered trademarks or trademarks of Dialogic. Dialogic's trademarks may be used publicly only with permission from Dialogic. Such permission may only be granted by Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. Any authorized use of Dialogic's trademarks will be subject to full respect of the trademark guidelines published by Dialogic from time to time and any use of Dialogic's trademarks requires proper acknowledgement. The names of actual companies and products mentioned herein are the trademarks of their respective owners.