

Appliance USB to Serial Cable



Sangoma USB to Serial RJ45 cable is used to connect Sangoma appliances to a Linux or Windows workstation.

Windows Driver Download

- [Sangoma Appliance USB to Serial Cable Drivers \(Download\)](#)
- Connect using putty, hyperterminal

Linux Drivers

- Linux distros already have support by default.
- Connect using minicom, putty

Sangoma Appliance Console Defaults

- Speed: 115200n8 1
- Hardware/Software flow control: disabled