

# First Boot & Initial Setup

## Initial Setup

- Unpack the SBC shipping box
- Connect the SBC appliance to a power source
- Connect the SBC appliance to LAN
- Connect to SBC the appliance via Laptop Browser
- Provision the Appliance
  - Change Password
  - Change Hostname & IP
  - Date Time
- Initial Provision Done
- Next step is to configure the SBC.
  - Please refer to usage scenarios

- Power connection
- Initial WebGUI connection
- Change default password
- Serial Console
- SSH login
- SBC license